


Ergonomic GSE Safety Supplies

PACTS, Inc.

Leading Edge Caster Pallet

Users Manual

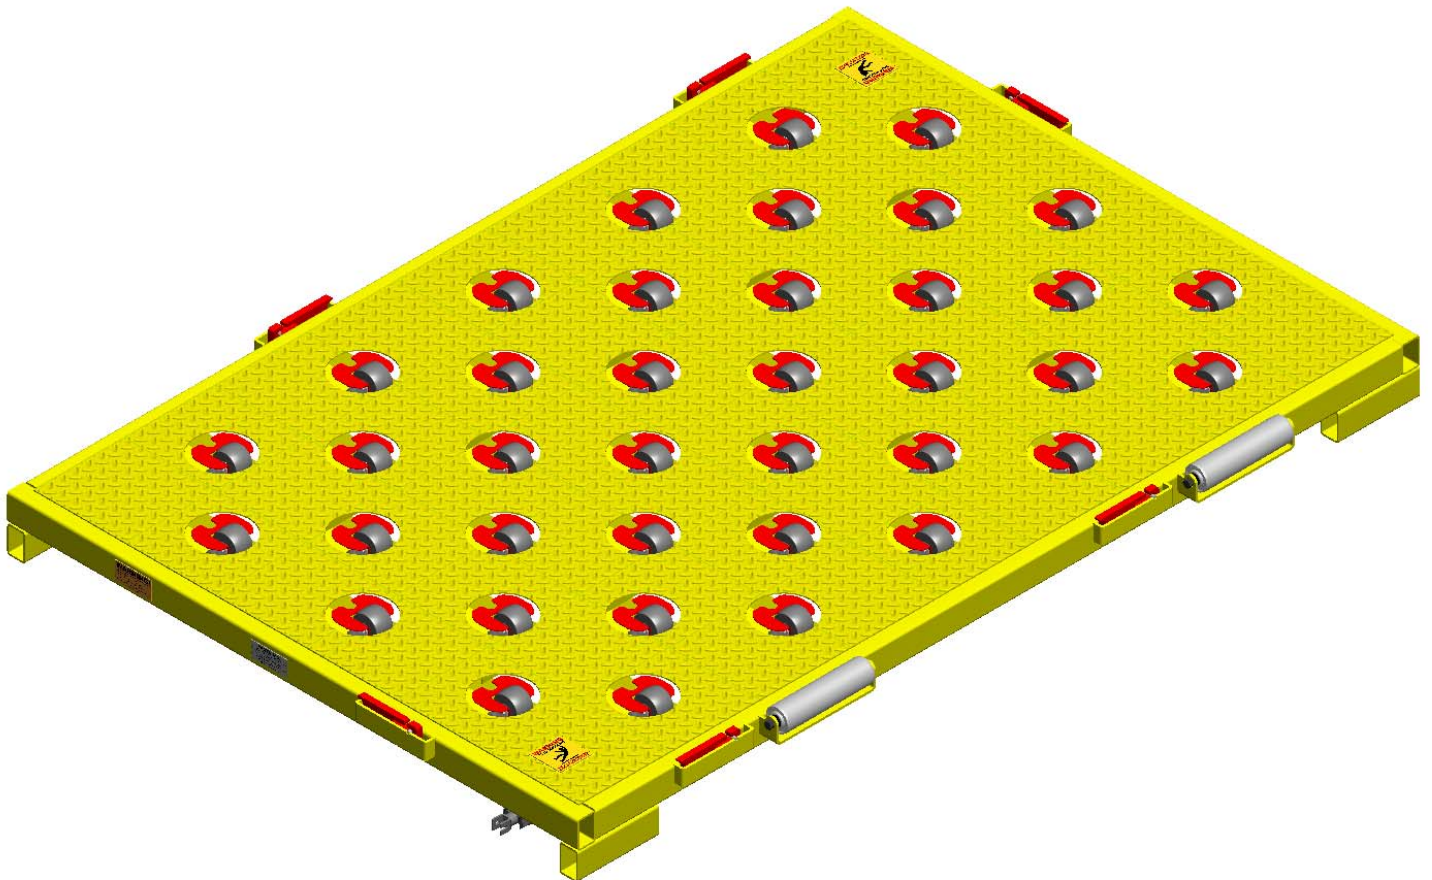

Pacific Air Cargo Transfer Systems, Inc. • 3205 C Street NE Auburn, WA 98002
Phone (253) 735-5277 • Fax (253) 735-5271 • www.pactsinc.com

ITM-2000-54-1 Rev 2


Page 1 of 6

12/3/08

© 2008 PACTS, Inc. All rights reserved.
PACTS, Inc. and Pacific Air Cargo Transfer Systems, Inc. are registered trademarks or trademarks of PACTS, Inc.
This product may be protected by one or more US Patents.

Leading Edge Caster Pallet

Users Manual

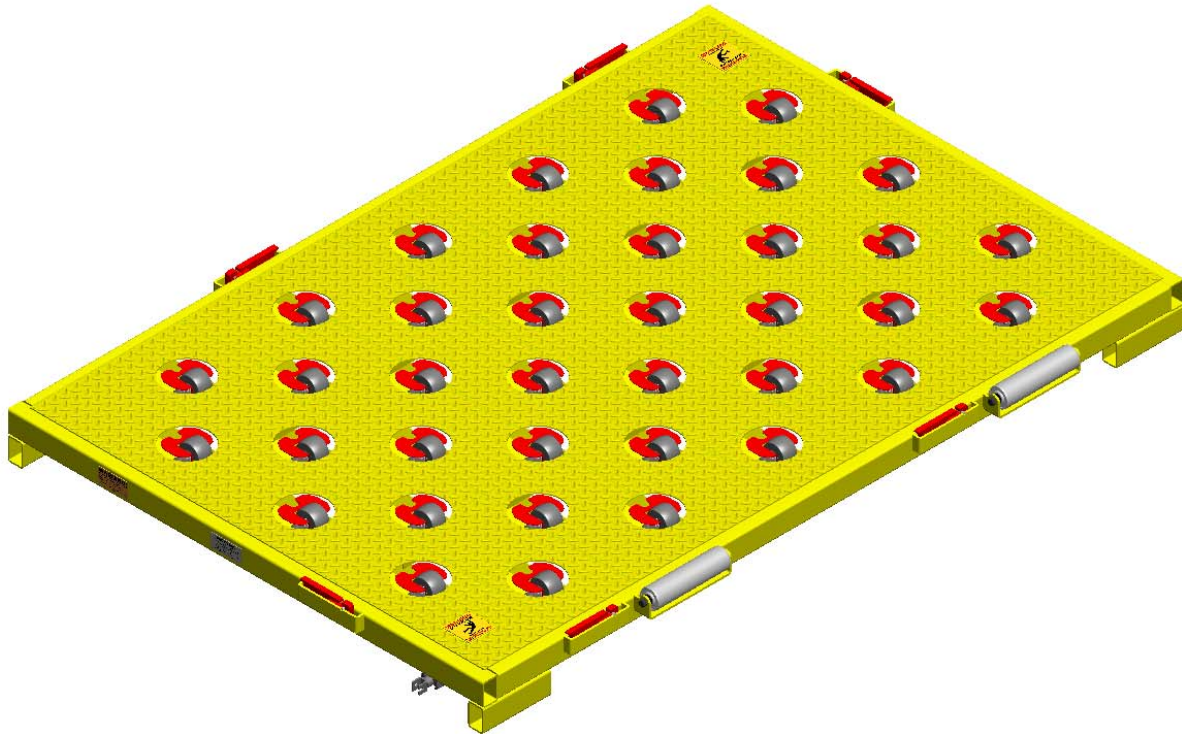

Product Description:

Heavy duty steel construction. Pallet with multi-directional surface casters and leading edge rollers. Features two adjustable scissor jacks to accommodate height variances between different trailers. Moveable with forklift or pallet jack from all four sides. Stackable for compact storage when not in use. Interfaces with all PACTS units.

Product Specifications:

Capacity	• 5000 lbs
Height	• 7"
Width	• 63" to inside of locks, 66-5/8" overall
Length	• 93" to inside of locks, 95" overall
Weight	• 700 lbs
Finish	• Powder coated safety yellow

Pacific Air Cargo Transfer Systems, Inc. • 3205 C Street NE Auburn, WA 98002
Phone (253) 735-5277 • Fax (253) 735-5271 • www.pactsinc.com

ITM-2000-54-1 Rev 2

Page 2 of 6

12/3/08

© 2008 PACTS, Inc. All rights reserved.
PACTS, Inc. and Pacific Air Cargo Transfer Systems, Inc. are registered trademarks or trademarks of PACTS, Inc.
This product may be protected by one or more US Patents.

Leading Edge Caster Pallet

Users Manual



General Use Instructions

- Failure to follow the instructions in this Users Manual or intentional misuse of product may cause premature failure and/or damage to Leading Edge Caster Pallet, cargo containers, surrounding property, personal injury, or death.
- This product is designed for use on flat level ground only.
- Do not attempt to manually lift the Leading Edge Caster Pallet!
- Use care when walking on top deck surface. Do not step on surface casters. The caster surface presents a slipping hazard.
- Before rolling a container onto the Leading Edge Caster Pallet, ensure that two (2) locks are in the upright position at the end furthest away from the container. Once container is resting against far set of locks, secure a minimum of six (6) locks in the upright position. Locks must be used on all four (4) sides of the container. Failure to do so may result in container rolling off the end of the Leading Edge Caster Pallet.
- Do not enter a container for loading/un-loading without a minimum of six (6) locks securely in the upright position.
- Do not pull containers towards you on the caster surface. Always push containers away from you.
- Ensure that the other side of the container is free from people or other obstructions before pushing the container on the caster surface.
- Always maintain control of container while on caster surface.
- Do not exceed a container speed of one (1) foot per second.
- This product is designed to be moved with a forklift or pallet jack when used for Demi air cargo containers only.
- Forklifts and pallet jacks used to move loaded Leading Edge Caster Pallet must have a minimum rated load capacity of 5000 lbs.
- Do not attempt to move a loaded Leading Edge Caster Pallet without a minimum of six (6) locks in the upright position.

Pacific Air Cargo Transfer Systems, Inc. • 3205 C Street NE Auburn, WA 98002
Phone (253) 735-5277 • Fax (253) 735-5271 • www.pactsinc.com

ITM-2000-54-1 Rev 2




Page 3 of 6

12/3/08

© 2008 PACTS, Inc. All rights reserved.
PACTS, Inc. and Pacific Air Cargo Transfer Systems, Inc. are registered trademarks or trademarks of PACTS, Inc.
This product may be protected by one or more US Patents.

Leading Edge Caster Pallet

Users Manual

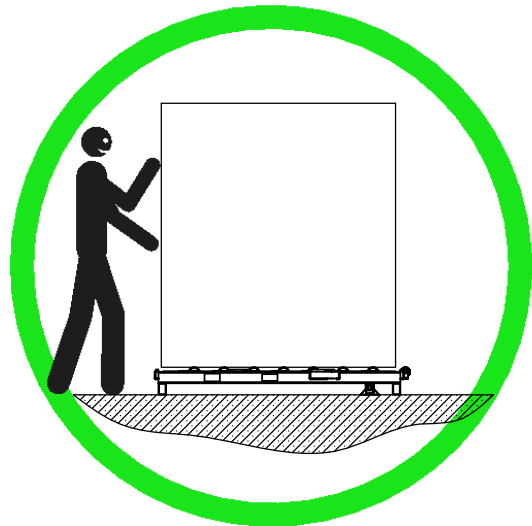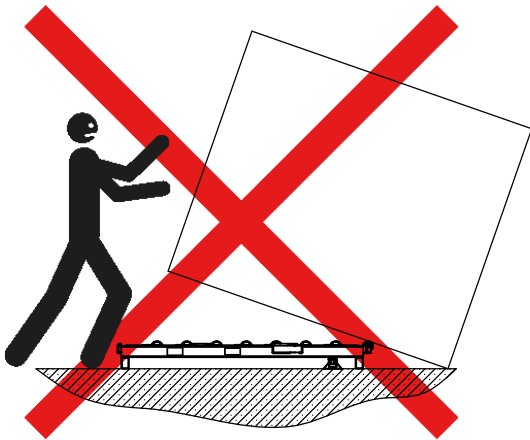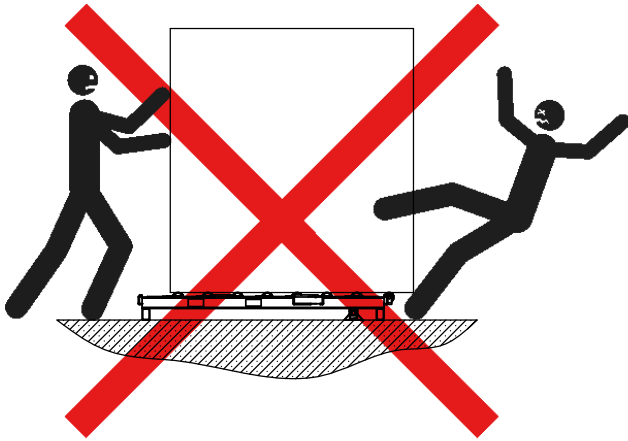

Pacific Air Cargo Transfer Systems, Inc. • 3205 C Street NE Auburn, WA 98002
Phone (253) 735-5277 • Fax (253) 735-5271 • www.pactsinc.com

ITM-2000-54-1 Rev 2

Page 5 of 6

12/3/08

© 2008 PACTS, Inc. All rights reserved.
PACTS, Inc. and Pacific Air Cargo Transfer Systems, Inc. are registered trademarks or trademarks of PACTS, Inc.
This product may be protected by one or more US Patents.

Leading Edge Caster Pallet

Users Manual

Standard Warranty Terms & Conditions

- I. **WARRANTY:** PACTS, Inc. warrants to the original purchaser of Equipment that for the Warranty Period (as defined below), the Equipment will be free from defects in materials and workmanship. The foregoing warranty is subject to the proper installation, operation and maintenance of the Equipment in accordance with installation instructions outlined in this Users Manual supplied to Customer. Warranty claims must be made by Customer in writing, delivered within thirty (30) days of the manifestation of a problem. PACTS, Inc.'s sole obligation under the foregoing warranty is, at PACTS, Inc.'s option, to repair, replace or correct any such defect that was present at the time of delivery, or to remove the equipment and to refund the purchase to Customer.
 - A. The "Warranty Period" begins on the date the Equipment is delivered and continues for ninety (90) days.
 - B. Any repairs or modifications not performed by PACTS, Inc. on the Equipment voids any and all warranty claims.
 - C. Excluded from the warranty are problems due to accidents, misuse, misapplication, storage damage, negligence, or modification to the Equipment or its components.
 - D. PACTS, Inc. does not authorize any person or party to assume or create for it any other obligation or liability in connection with the Equipment except as set forth herein.
 - E. If the Equipment should become defective during the warranty period, PACTS, Inc. will repair the Equipment, or at its option, elect to replace it free of charge, and in either case, the return transportation will be at no charge to Purchaser. As a condition of warranty coverage, the Equipment on any warranty claim shall be delivered prepaid to PACTS, Inc. at its facilities in Auburn, Washington. PACTS, Inc. shall not be liable for any cost of removal or reinstallation pertaining to the defective Equipment, and such cost, if any, shall be borne exclusively by the Customer.
- II. **WEAR COMPONENTS:** This product may or may not contain wear components that have an indefinable lifespan. Lifespan of wear components will vary greatly depending on application, frequency of use, environmental conditions, and many other factors. Wear components are available for purchase separately as replacement parts through our website www.pactsinc.com.
- III. **LIMITATION OF LIABILITY:** In no event shall PACTS, Inc. be liable for any indirect, incidental, punitive, special or consequential damages, or damages for loss of profits, revenue or use incurred by Customer or any third party whether in an action in contract, or tort, or otherwise even if advised of the possibility of such damages. PACTS, Inc. liability for damages arising out of or in connection with this agreement shall in no event exceed the purchase price of the defective Equipment.
- IV. **OPERATION OF EQUIPMENT:** Customer shall be responsible for the safe operation of the Equipment. Customer shall operate the Equipment in a reasonably competent manner and in compliance with this Users Manual for the Equipment. Customer shall comply with all applicable rules, laws, and regulations in connection with operation of the Equipment.

Pacific Air Cargo Transfer Systems, Inc. • 3205 C Street NE Auburn, WA 98002
Phone (253) 735-5277 • Fax (253) 735-5271 • www.pactsinc.com